





1. To begin, unscrew ACV200 body.

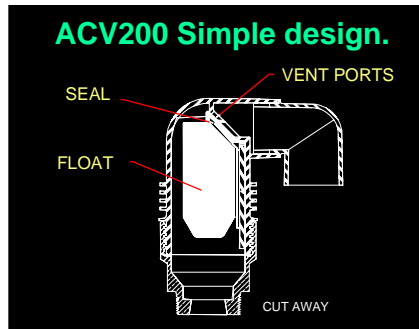

2. Cross-section showing parts.

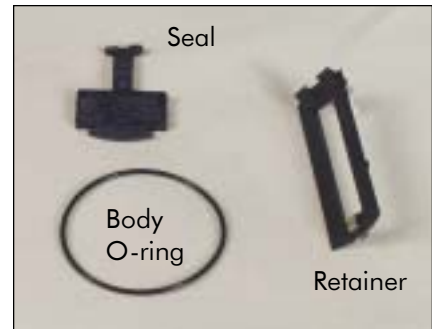

3. New repair kit parts.



4. Use screwdriver to pry seal retainer out.



5. Pull float and seal from body.



6. Remove old seal from float.



7. Press in new seal onto float.



8. Carefully guide seal into slots.



9. Slide in new retainer.



10. Press in retainer to hold seal.



11. Retainer fully pressed in place.



12. Screw body back together.